

Radiant **GUARD**

Protecting Your Energy Costs

Installation for House Wrap Behind Brick or Aluminum/Vinyl Siding

Please read and follow all of the steps below to ensure proper installation.


Prior to installation, store the product in a dry covered location as exposure to outdoor elements can degrade the performance of the product.

Products Suggested:

- Radiant **GUARD**™ Premium or Ultra radiant barrier insulation

Materials Needed:

- Tape Measure
- Utility knife
- Scissors
- Staple gun and 1" staples
- Large head nails or plastic washer head nails.

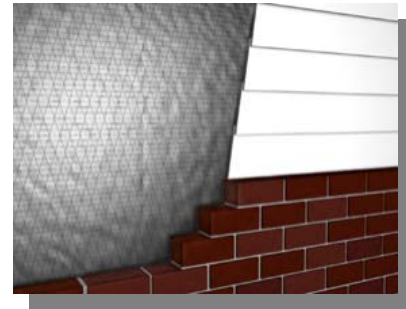

Instructions:

1. Prior to installing the exterior finish, staple the product (vertically or horizontally) directly to the exterior side of the structural panel.
2. Overlap the seams by 2".
3. Attach 1" x 2" furring strips over the radiant barrier to which to attach exterior wall. Furring strips are necessary to ensure at least a ¾" air space as required for a radiant barrier to be effective.
4. Finish the exterior wall per manufacturer's installation instructions.